



VDO Temperature Senders


Standard Ground and Dual Station Standard Ground

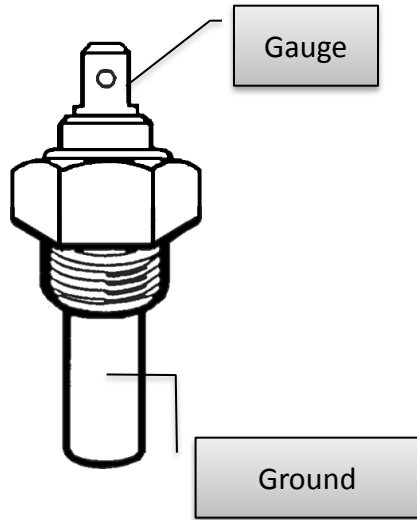


Floating Ground and Dual Station Floating Ground

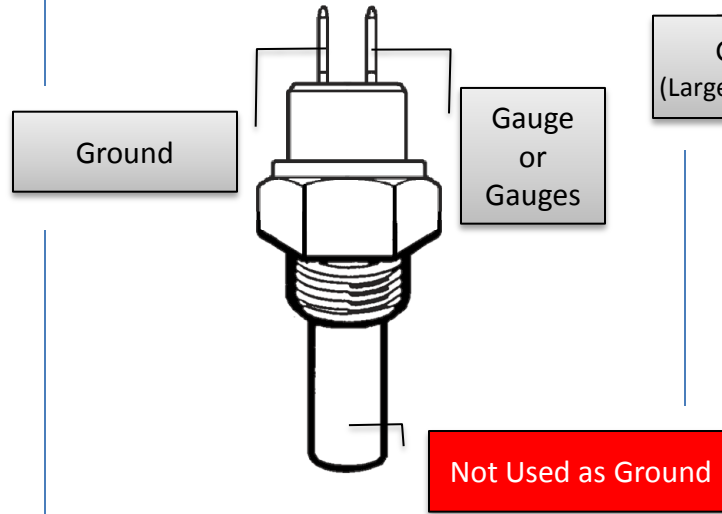

Standard Ground With Warning Contact

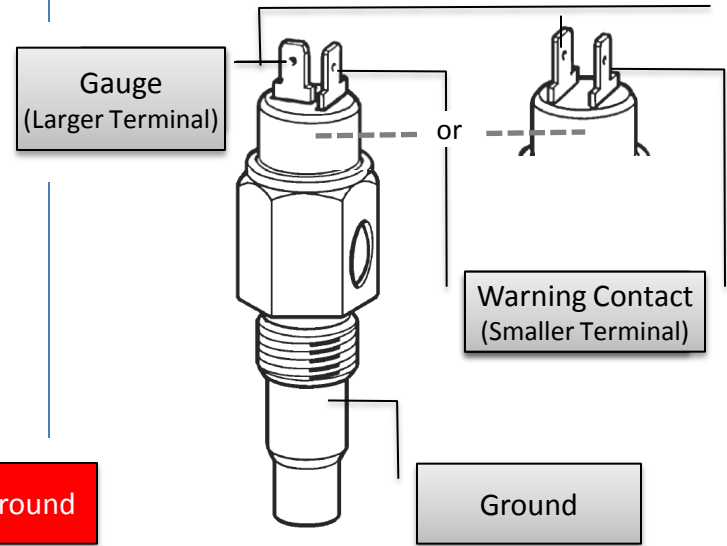

Connection Types

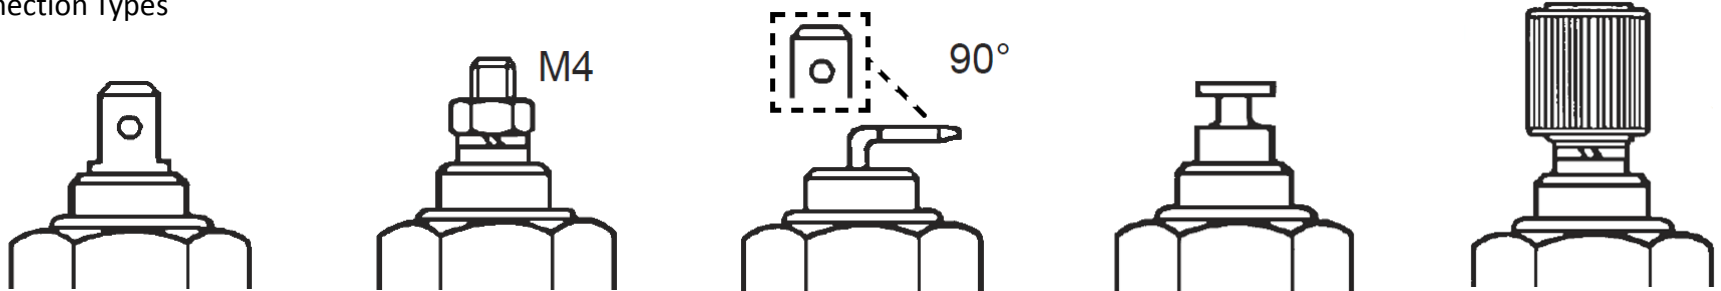

*Dual Station senders work with two identical VDO gauges ONLY.

* Warning Contact is the smaller terminal - size is 0.187"