
120R-101656 REV.: 4 REV. DESCRIPTION DATE BY

INSTALLATION INSTRUCTION

- 1. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE SPACED AND ARRANGED IN ACCORDANCE WITH INSTALLATION DRAWINGS OR AS OTHERWISE
- 2. SET ISOLATORS ON FLOOR OR SUB-BASE. ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES. SHIM OR GROUT AS REQUIRED LEVELING ALL ISOLATOR BASE PLATES "E" AT THE SAME ELEVATION (1/4" MAXIMUM DIFFERENCE IN ELEVATION CAN BE TOLERATED). ISOLATOR BASE PLATES MUST REST ON A FLAT SURFACE.
- 3. UNLESS SPECIFIED, MOUNTINGS NEED NOT BE FASTENED TO FLOOR IN ANY WAY. IF REQUIRED, BOLT MOUNTINGS TO FLOOR THROUGH SLOTS "D".
- 4. REMOVE ADJUSTING BOLT "C" WITH NUT "B" FROM TOP HOUSING "A". (DO NOT DISCARD.)
- 5. PLACE MACHINE OR EQUIPMENT ONTO TOP PLATE "A" OF ISOLATOR. THE WEIGHT OF THE MACHINE WILL CAUSE THE UPPER HOUSING OF THE MOUNT TO GO DOWN, POSSIBLY RESTING ON THE LOWER HOUSING.
- 6. ALIGN EQUIPMENT MOUNTING HOLE TO TOP HOUSING TAPPED HOLE.
- 7. TURN NUTS "B" UP ON LEVELING BOLTS SO THAT THEY WILL NOT INTERFERE WITH THE LEVELING PROCEDURE. INSERT BOLTS "C" THROUGH THE HOLES IN MACHINE BASE AND SCREW INTO THE TAPPED HOLE IN THE UPPER HOUSING OF THE MOUNTING BY HAND AS FAR AS THEY WILL GO.
- 8. ADJUST EACH ISOLATOR IN SEQUENCE; SCREW DOWN ONE COMPLETE TURN ON THE ADJUSTING BOLT OF EACH MOUNTING. ADJUST UNTIL 1/4" GAP IS OBTAINED ON ALL
- 9. TURN NUT ON ADJUSTING BOLT "C" DOWN AGAINST MACHINE LEG AND LOCK IN PLACE WITH WRENCH TO COMPLETE ADJUSTMENTS.
- 10. INSTALLATION IS COMPLETE.

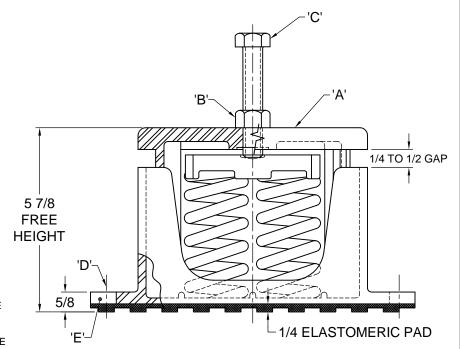

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE

CERTIFIED FOR:		
JOB NAME:		
CUSTOMER :		
CUSTOMER P.O.:		
SALES ORDER:		

SERIES C4E-1D **CAST IRON SPRING-FLEX MOUNTINGS** WITH EXTERNAL ADJUSTMENT INSTALLATION INSTRUCTIONS

	-
THE VMC GROUP The Power of Together Bloomingdale, NJ 07403	
Houston, TX 77041	l

NONE SHEET: 2 OF 2

DRAWING NO.: REVISION