


CONNECTION DIAGRAM FOR TACHOMETER (0-4000RPM) WITH DIP SWITCH ARRANGEMENT


CALIBRATION CHART FOR TACHOMETER (0 TO 4000 RPM) WITH DIP SWITCH :-

FOR TACHOMETER IF SIGNAL IS TAKEN FROM ALTERNATOR :-

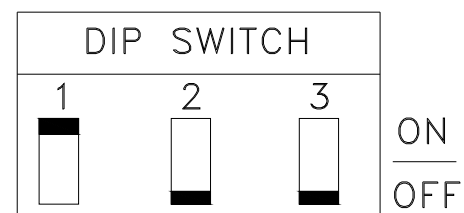

DIP SWITCH POSITION			
1	2	3	PULSES
OFF	OFF	OFF	10.7
OFF	ON	OFF	21.3

CALIBRATION TABLE		
RPM	FREQUENCY IN Hz	
	10.7 PULSES	21.3 PULSES
1000	175	350
2000	350	700
3000	525	1050
4000	700	1400

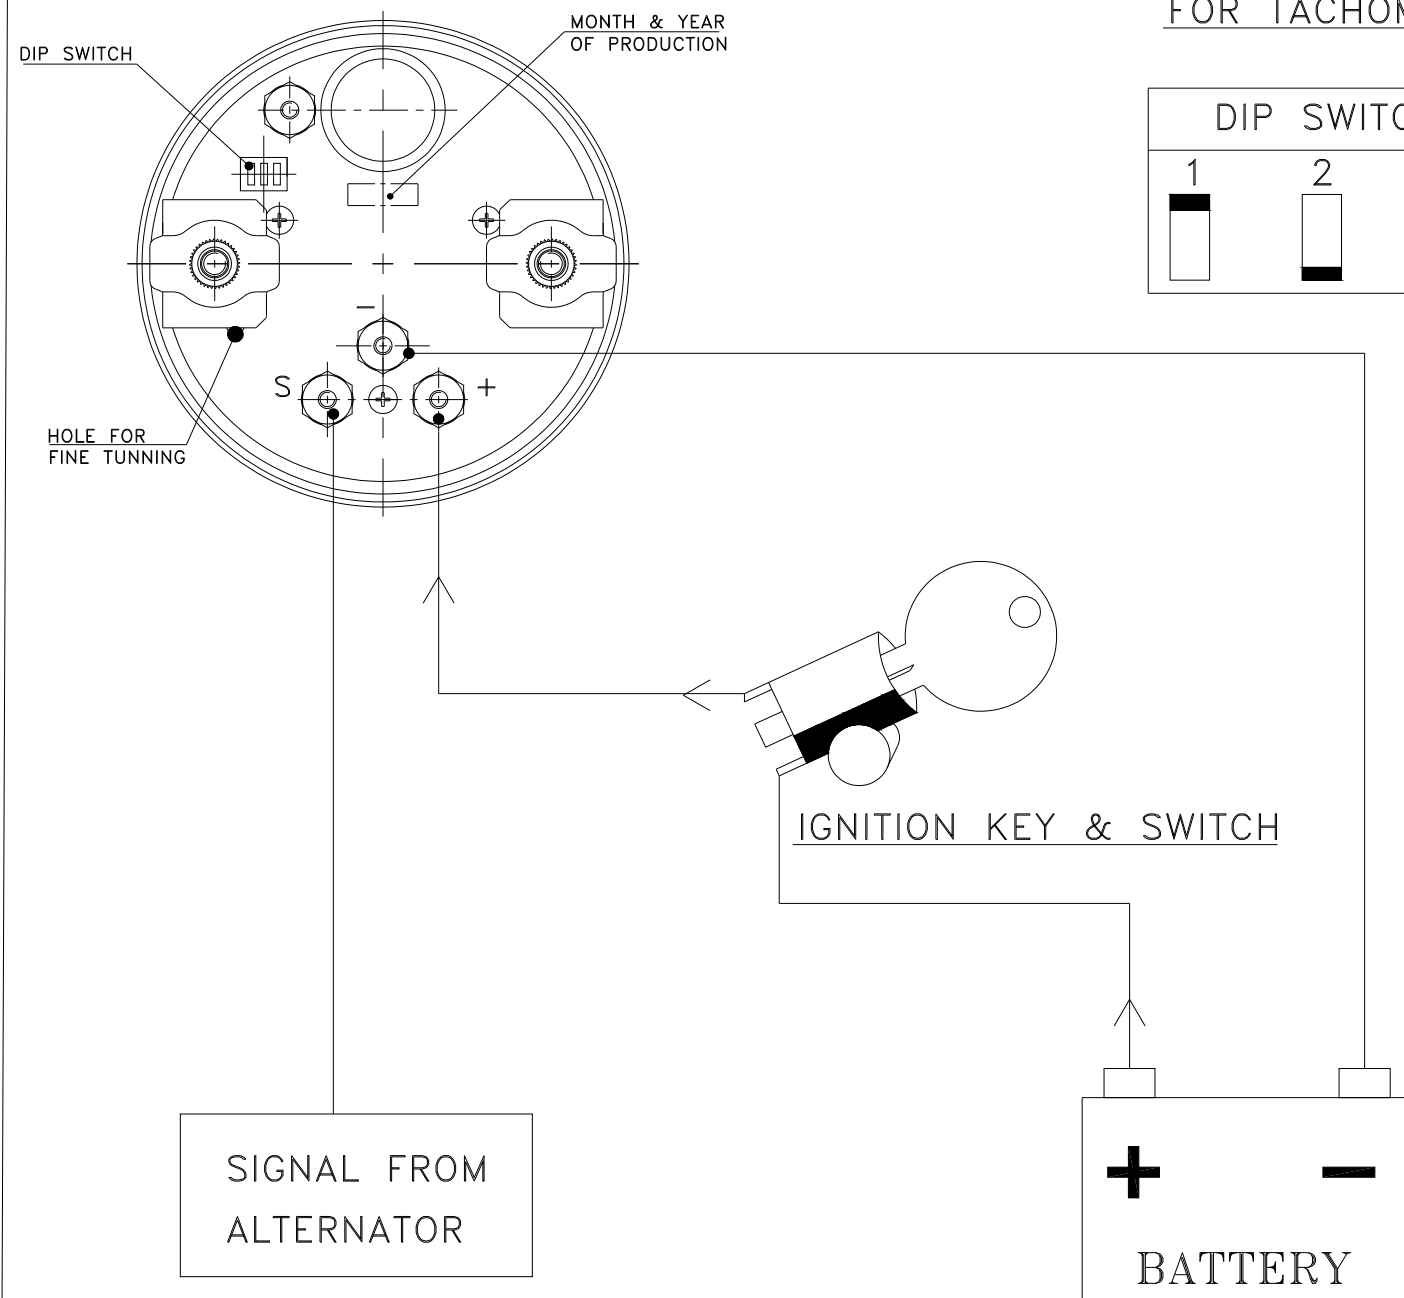

CONNECTION :- + : POSITIVE
S : SIGNAL FROM ALTERNATOR
- : NEGATIVE (INSULATED FROM BODY)

INDICATION INSTRUMENTS LIMITED, FARIDABAD-121006
INDIA