


## SUNSHIELD 900 INSTALLATION INSTRUCTIONS

- 1) Read attached 3M VHB tape instructions for proper surface cleaning to insure good adhesion. 3M VHB tape is very strong and will not separate under normal outdoor weather conditions such as heat, cold, and water exposure. The tape is flexible enough to allow a slight give during articulation of moving parts. Failure to prep the surface accordingly can result in separation in the above mentioned conditions.
- 2) After prepping the surface and before removing the protective paper tape from the hinge, plan the position for even left and right spacing across the controller. The best hinge placement is placing the bottom of the tape line close to top rubber surround of the TSC-900 controller up to  $\frac{1}{4}$ " above as indicated in the pictures below. This results in best articulation of the hinge and seating across the rubber surround.

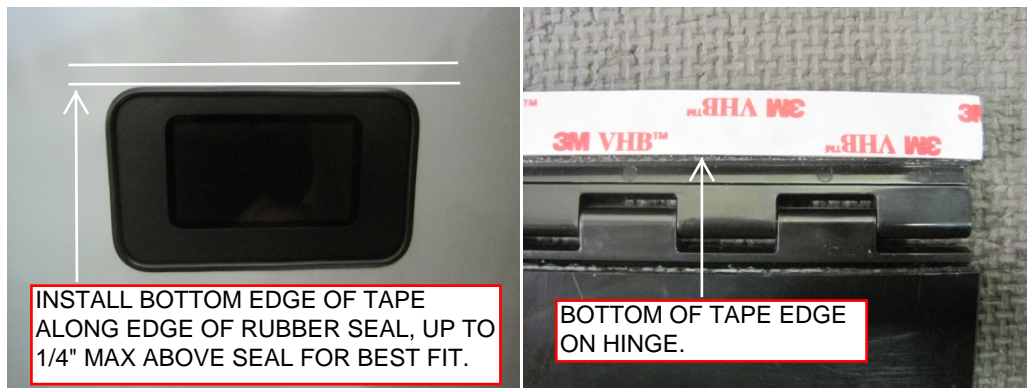

- 3) After verifying and marking install location remove protective paper tape strip. Carefully position the hinge in position and press firmly to seat the tape on the metal surface, lifting the flap if necessary to make sure the hinge tape is seated squarely with the metal surface. Use a towel to put firm pressure on the taped part of the hinge and slide back and forth across to fully seat and activate the tape adhesive.

