

Thermosiphon Engine Heaters

WL Series
Weathertight
Three Phase

2500–5000 Watts



WL Model without thermostat



WL Model with thermostat

CHART 1

Heaters with Thermostats

To specify temperature range of thermostat, insert numerical code from chart in place of the **XX** in model number.

Example:

Desired Temp. Range: 100° - 120°F
Model Number: WL3252**XX**-200
Order as: WL3252**10**-200

Temperature Range		Numerical Code
ON	OFF	
80°F (27°C)	100°F (38°C)	08
100°F (38°C)	120°F (49°C)	10
120°F (49°C)	140°F (60°C)	12
Adjustable 90° - 130°F (32° - 54°C)		A3

CHART 2

Heaters with Thermostats

Temperature Range		Sensing Unit
ON	OFF	
80°F (27°C)	100°F (38°C)	FSU8
100°F (38°C)	120°F (49°C)	FSU10
120°F (49°C)	140°F (60°C)	FSU12
Adjustable 90° - 130°F (32° - 54°C)		FSU90-130


Example:

Model Number: WL3252**10**-200
T-Stat Replacement: FSU10

Engine Displacement	Model Number without Thermostat	Model Number with Thermostat see chart 1	Volts	Watts	Phase	Amps
600 – 800 CID 9.8 – 13.1 L	WL325800-000	WL3258XX-200	208	2500	3	6.9
	WL325200-000	WL3252XX-200	240	2500	3	6.0
	WL325A00-000	WL325AXX-200	400	2500	3	3.6
	WL325400-000	WL3254XX-200	480	2500	3	3.0
	WL325500-000	WL3255XX-200	575	2500	3	2.5
1000 – 1350 CID 16.4 – 22.1 L	WL340800-000	WL3408XX-200	208	4000	3	11.1
	WL340200-000	WL3402XX-200	240	4000	3	9.6
	WL340A00-000	WL340AXX-200	400	4000	3	5.8
	WL340400-000	WL3404XX-200	480	4000	3	4.8
	WL340500-000	WL3405XX-200	575	4000	3	4.0
1350 – 1650 CID 22.1 – 27.0 L	WL350800-000	WL3508XX-200	208	5000	3	13.9
	WL350200-000	WL3502XX-200	240	5000	3	12.0
	WL350A00-000	WL350AXX-200	400	5000	3	7.2
	WL350400-000	WL3504XX-200	480	5000	3	6.0
	WL350500-000	WL3505XX-200	575	5000	3	5.0

All 3 phase heaters with thermostat must use a control box.
See Control Systems page 30.

WL Model

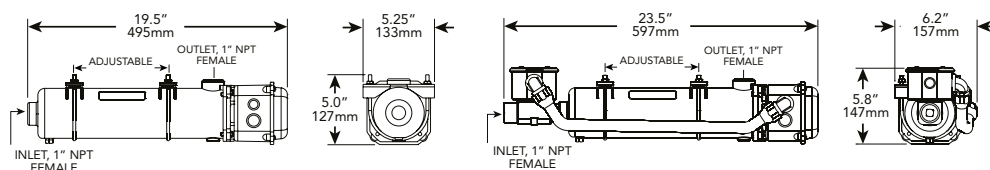

Replacement Parts

Model Number without Thermostat	Model Number with Thermostat see chart 2	Element Replacement
WL325800-000	WL3258XX-200	REWL3258
WL325200-000	WL3252XX-200	REWL3252
WL325A00-000	WL325AXX-200	REWL325A
WL325400-000	WL3254XX-200	REWL3254
WL325500-000	WL3255XX-200	REWL3255
WL340800-000	WL3408XX-200	REWL3408
WL340200-000	WL3402XX-200	REWL3402
WL340A00-000	WL340AXX-200	REWL340A
WL340400-000	WL3404XX-200	REWL3404
WL340500-000	WL3405XX-200	REWL3405
WL350800-000	WL3508XX-200	REWL3508
WL350200-000	WL3502XX-200	REWL3502
WL350A00-000	WL350AXX-200	REWL350A
WL350400-000	WL3504XX-200	REWL3504
WL350500-000	WL3505XX-200	REWL3505


Common Replacement Parts available for all listed heaters

High Limit Control	HLC-165
Check Valve	RV-M
Element O-ring	TML-OR
Tank	RTL
Mounting Brackets	FK7

ADAPTER FITTINGS

For the use of 0.75" or 1" ID heater hose, hose barb adapters are available. See below.

HB-1	1" NPT to 1" hose barb adapter. Installs in 1" NPT female inlet or outlet of the heater.
HB-3/4	1" NPT to 0.75" hose barb adapter. Installs in 1" NPT female inlet or outlet of the heater.

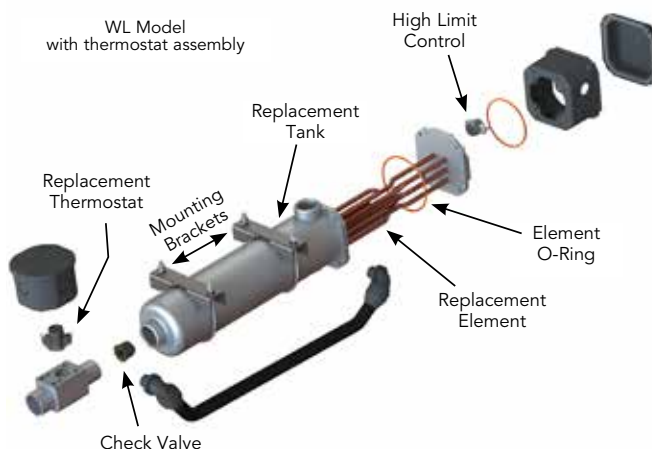

HOTSTART Model Number	Caterpillar Model Number	Volts	Pre-Wired at assembly	Watts	Phase	Amps
CL130DA2-000	7E-6247	120/240	120	3000	1	25.0 @ 120 V 12.5 @ 240 V
CL140EA2-000	—	240/480	240	4000	1	16.7 @ 240 V 8.3 @ 480 V
CL160EA2-000	7E-6248 (2006504)	240/480	240	6000	1	25.0 @ 240 V 12.5 @ 480 V
CL160CA2-000	7E-6249	120	2-120 V circuits	6000	1	25.0 per circuit


NOTE: Vertical installation ONLY

For original equipment replacement:

- Two 5" stainless steel clamps are included to mount heater to existing bracket.

For new installations:

- U-bolt mounting brackets available. Order kit number: **FK9**

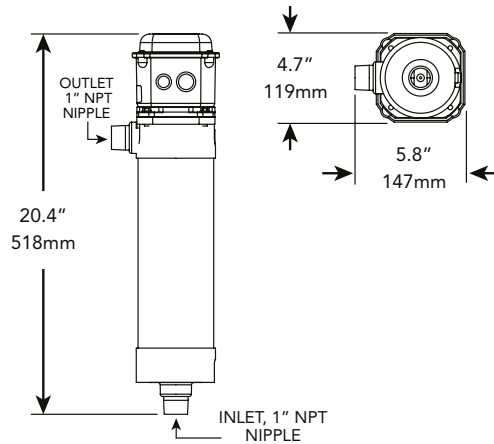

Thermosiphon Engine Heaters

OEM Replacement
Weathertight
Single Phase

3000–6000 Watts



Vertical Mount
OEM replacement

Replacement Parts

HOTSTART Model Number	Element Replacement
CL130DA2-000	RECL130D
CL140EA2-000	RECL140E
CL160EA2-000	RECL160C
CL160CA2-000	RECL140E

Common Replacement Parts available for all OEM replacement heaters	
Thermostat	AMT70210-A2
Element O-ring	TML-OR
Tank	RTCSM
Box	RTBCL-100

CL OEM Replacement

